


CELL-TEKTM Geosynthetics LLC

Multiple geocellular grids must be connected to each other to create a continuous matrix of cells. See instructions below. They can be connected “cell wall to cell wall” or “weld end to weld end”, the result is the same.

Connection Type 1 - Cell Wall to Cell Wall

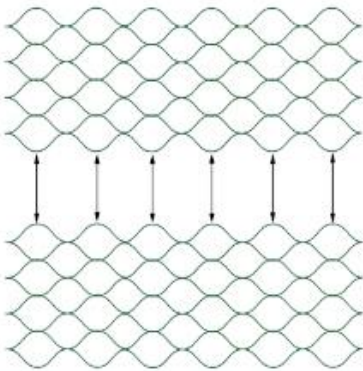

Connection Type 2 - Weld End to Weld End



A pneumatic stapler can be used for cell depth of 3” – 6” and the hand held stapler can be used for the 3” – 4” cell depths.




Pneumatic Stapler

OR




Hand Held Stapler

Type 1 - Cell Wall Connection

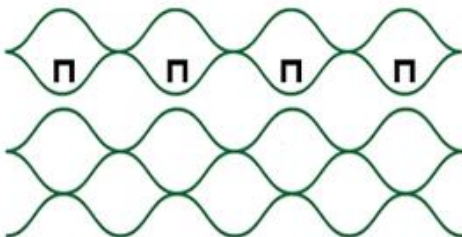

Type 2 - Weld End Connection

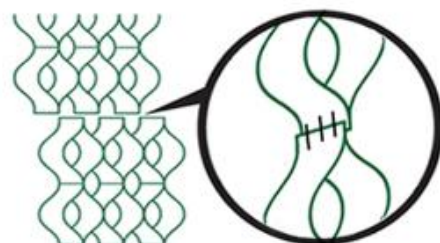

- Use heavy duty staples



BUILDING MATERIALS

Providing Architects and Builders with
Superior Paving, Decking and Pedestal Products.

Commercial | Luxury Residential | Municipal

sales@hdgbuidngmaterials.com

(503) 360-9551